

INTEGER MULTIPLIER TABLE

MB Point	PARAMETER	-----CT SCALE-----			
		1-5A	6-59A	60-599A	600-5999A
1	kWH, low-word	0.0001	0.001	0.01	0.1
2	kWH, high-word	6.5536	65.536	655.36	6553.6
3	kW	0.0001	0.001	0.01	0.1
4	kVAR	0.0001	0.001	0.01	0.1
5	kVA	0.0001	0.001	0.01	0.1
6	PF	0.0001	0.0001	0.0001	0.0001
7	Voltage, L-L	0.01	0.01	0.01	0.01
8	Voltage, L-N	0.01	0.01	0.01	0.01
9	Current	0.0001	0.001	0.01	0.1
10	Frequency	0.01	0.01	0.01	0.01
11	kW, phase A	0.0001	0.001	0.01	0.1
12	kW, phase B	0.0001	0.001	0.01	0.1
13	kW, phase C	0.0001	0.001	0.01	0.1
14	PF, phase A	0.0001	0.0001	0.0001	0.0001
15	PF, phase B	0.0001	0.0001	0.0001	0.0001
16	PF, phase C	0.0001	0.0001	0.0001	0.0001
17	Voltage, phase A-B	0.01	0.01	0.01	0.01
18	Voltage, phase B-C	0.01	0.01	0.01	0.01
19	Voltage, phase A-C	0.01	0.01	0.01	0.01
20	Voltage, phase A-N	0.01	0.01	0.01	0.01
21	Voltage, phase B-N	0.01	0.01	0.01	0.01
22	Voltage, phase C-N	0.01	0.01	0.01	0.01
23	Current, phase A	0.0001	0.001	0.01	0.1
24	Current, phase B	0.0001	0.001	0.01	0.1
25	Current, phase C	0.0001	0.001	0.01	0.1
26	Average kW	0.0001	0.001	0.01	0.1
27	Minimum kW	0.0001	0.001	0.01	0.1
28	Maximum kW	0.0001	0.001	0.01	0.1
29	CT Scale	1	1	1	1
30	Over Voltage Thres.	0.01	0.01	0.01	0.01
31	Under Voltage Thres.	0.01	0.01	0.01	0.01
32	Over Current Thres.	0.0001	0.001	0.01	0.1
33	Under Current Thres.	0.0001	0.001	0.01	0.1
34	Over KVA Thres.	0.0001	0.001	0.01	0.1
35	Under KVA Thres.	0.0001	0.001	0.01	0.1